

# TGI Helpful Hints

## ❖ How to Install the Disc Lock Release Unit

**Please Note:** Your Disc Lock Release Unit must be fixed to the counter to work properly.

### Equipment:

1. A Power Drill
2. A 2mm drill bit
3. A Phillips Head Screwdriver (preferably electric)
4. 4 x 30mm x 10gm screws (provided)
5. Double-sided adhesive tape (provided attached)
6. 1 x Disc Lock Release Unit (provided)



### Method 1: Temporary Attachment - Using Double-Sided Adhesive Tape

1. Decide on the most convenient location for your unit.
2. Turn the unit over and remove the backing from the adhesive tape.
3. Carefully place the unit in position and press down to secure the machine using the tape.

### Method 2: Permanent Attachment - When Satisfied with the Location


This is the preferred method for best operating results and will last longer than using the tape

1. Drill 5mm deep holes into your counter using the existing 4 holes as guides using a 2mm drill bit.
2. Screw the unit to the counter using the supplied screws and your screwdriver.

## ❖ How to Adjust and Maintain the Disc Lock Release Unit (DLRU)



1A.

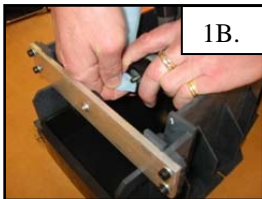

1B.

### ✚ Step 1 - You need:

1. 8mm C spanner, push down tool and 4mm allen key – supplied by TGI
2. Phillips head screwdriver
3. Methylated spirits
4. Lint free cloth

### ✚ Why you would do this? If you find that the machine is not removing the Disc Locks or only taking the button out.

✚ Firstly clean the Disc Lock cylinder pin by wiping it firmly with the cloth and methylated spirits to remove any dirt. Refer to images 1A & 1B.

✚ If you are still experiencing problems, then **call** one of our team and we will help you with the adjustment.

*N.B. The Disc Lock machine is mechanical and may need adjustment anywhere from 2-6 weeks after you receive it.*



2.

### ✚ If cleaning the Disc Lock cylinder pin doesn't improve the working of the release unit, you will need to do the following:

1. Firstly, remove the Disc Lock unit cover if it has one
2. Place the allen key in the screw at the bottom of the handles. (Picture 3)
3. Place the C spanner on the nut at the bottom of the handles. (Picture 4)
4. While holding the allen key firmly turn the C spanner **anti clockwise** until the screw is loose.

5. Have the push down tool ready and call a TGI sales rep:

QLD stores – Joe: 0418 129504 or Brooke: 0411 557978

VIC stores – Lee: 0438 369445 or Frank 0412 348 991

NSW stores – Peter: 0408 418995 or Jenny: 0414 923 742



3.



4.